


The top schematic drawing illustrates tape casting. The bottom sketch shows the different stages during the processing: the slip consisting of water, ceramic particles and binder; the cast, dried green sheet; and, finally, the microstructure of the sintered material.

Tape casting is a forming technique for producing thin, flat ceramics. The method was originally developed for producing electronic ceramics (insulating substrates and packages and multilayer capacitors) and is still mainly used for this. Structural laminates, knives, membranes and solid oxide fuel cells are examples of other applications for thin ceramics formed by tape casting. The tape thickness that can be achieved is generally in the range of 25 μm up to 1 mm but it is possible to produce tapes down to 5 μm .

The Swedish Ceramic Institute (SCI) has focused its research and development within this area on water-based tape casting. An aqueous system has the advantages of reducing health and environmental hazards coupled with lower cost and a more manageable process. Among the disadvantages of water-based tape casting we can mention slower drying, higher crack sensitivity and, for some ceramics, reactions with water. Studies have been made, in which the

entire process chain has been evaluated with regard to rheological properties, drying, binder removal, sintering and, finally, microstructure. Acrylic latex-type binders have been identified as the best type of binder owing to their low viscosity at high polymeric content and their internal plasticization, which makes additional plasticizer superfluous. Furthermore, lamination is possible at room temperature. Green tapes are obtained that are insensitive to air humidity, at the same time as they have a high quality with regard to surface smoothness, flexibility and green density. The longer drying times of water-based systems are overcome by the fact that higher solids loading is possible in aqueous systems than in organic, solvent-based systems, coupled with effective heating during drying. Important characteristics of the latex relevant to the processing are the latex particle size, the stabilisation type of the latex and the type of polymer.

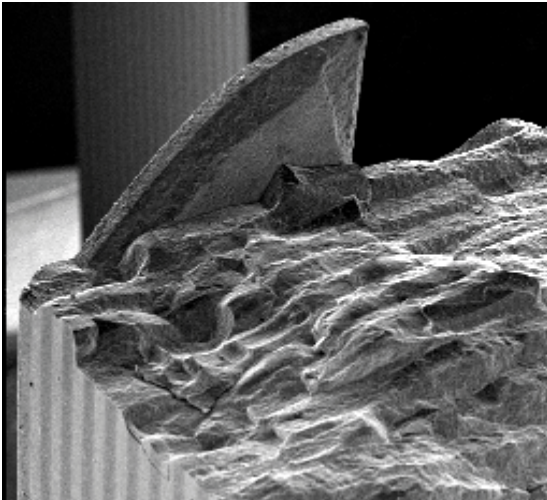

Fractured surface of an $\text{Al}_2\text{O}_3\text{-ZrO}_2/\text{Al}_2\text{O}_3$ laminate manufactured by tape casting. It has been demonstrated that certain types of laminates have an increased thermal shock resistance compared with the constituent layer materials.

So far, SCI has tape cast the following materials: Al_2O_3 , ZrO_2 , cordierite, mullite, aluminium titanate, PZT, SiC, Si_3N_4 and particulate composite materials: $\text{Al}_2\text{O}_3\text{-ZrO}_2$, cordierite- ZrO_2 and $\text{Si}_3\text{N}_4\text{-TiN}$. Laminated structures such as Al_2O_3 membranes, SiC/C laminates and PZT-actuators have been made of these materials. SCI's tape caster (TC 155 from AEM Inc.) is a continuous machine with a stationary casting head. The machine is designed for making thin tapes with a thickness range 4–400 μm . For thicker components (0.5 mm up to 7 mm) lamination of green tapes is possible.

References

SCI has, among other things, published the following papers within the area:

Solid-State-Sintered Silicon Carbide by Water-Based Tape Casting, Kristoffersson A & Carlström E, Fourth Euro-Ceramics, Vol. 1 "Basic Science – Developments in Processing of Advanced Ceramics, Part 1", 367–74, 1995

Tape Casting of Alumina in Water with an Acrylic Latex Binder, Kristoffersson A & Carlström E, J. Eur. Ceram Soc., 17, 289–97, 1997

Preparation of Alumina Membranes by Tape Casting and Dip Coating, Lindqvist K & Lidén E, J. Eur. Ceram. Soc., 17, 359–66, 1997

Study of Interactions between Polyelectrolyte Dispersants, Alumina and Latex Binders by Rheological Characterisation, Kristoffersson A, Lapasin R & Galassi C, J. Eur. Ceram. Soc., 18, 2133–40, 1998.

Water-based Tape Casting of Ceramics and Fabrication of Ceramic Laminates, Kristoffersson A, Ph D Thesis, Chalmers University of Technology, Swedish Ceramic Institute, Göteborg, 1999.

Contact us for more information

Do not hesitate to contact us if you want to have more information or have specific questions that you want to discuss. Based on your requests and needs we can provide a quotation.

More information is provided by:

Contact

Lisa Palmqvist

Phone

+46 (0)31-706 60 26

E-mail

lisa.palmqvist@ivf.se

The Swedish Ceramic Institute (SCI) is a division of IVF and works with product oriented research and development of ceramics and related materials.

IVF Industrial Research and Development Corp., Argongatan 30, SE-431 53 Mölndal, Sweden
Phone: +46 (0)31-706 60 00, fax: +46 (0)31-27 61 30, www.sci.se resp. www.ivf.se